

TIME/DAY SETTING (CLOCKWISE)

## OPERATION PROCEDURE

### 1. SETTING THE DAY

SETTING THE TIME (HOUR, 24HOUR, MINUTE and SECOND)

### 2. SETTING THE MONTH

## SETTING THE DAY AND TIME (HOUR, 24 HOUR, MINUTE AND SECOND)

The hour, 24 hour, minute, second and day are set by the same operation.

## SETTING PROCEDURE



## SETTING THE DAY

1. Pull the crown out to the 1st position to stop the second hand at 0 (12 o'clock).
2. Turn the hour/minute hands in a clockwise direction to set a day  
In order to set the day, you must advance the hour hand by 24 hours per day.

### NOTE:

Do not set the day by turning the crown in counterclockwise direction.

- \* The day changes somewhere between 0:00a.m. and 5:30a.m. or a little later.

## SETTING THE TIME

After setting the day, set the hour (and 24hour) and minute hands. Turn the hour/minute hands in a clockwise direction to set the time. To ensure time is set accurately, first turn the minute hand 5 minutes ahead of desired time and then turn back (in a counterclockwise) to the desired time.

After setting the time, use a time signal to synchronize the watch by pushing crown to the normal position to start the second hand going.

### NOTE:

Make sure you have correctly set AM/PM before setting the time

When the day changes over, it is a.m..


( Day changes over between 0:00a.m. and 5:30a.m. or little later)

Check am./p.m. by the 24hour hand.

## SETTING THE MONTH (BY QUICK OPERATION)

Each time the month-adjustment button is pushed, the month advances one month at a time.

Be sure to press firmly on the button when making month changes.

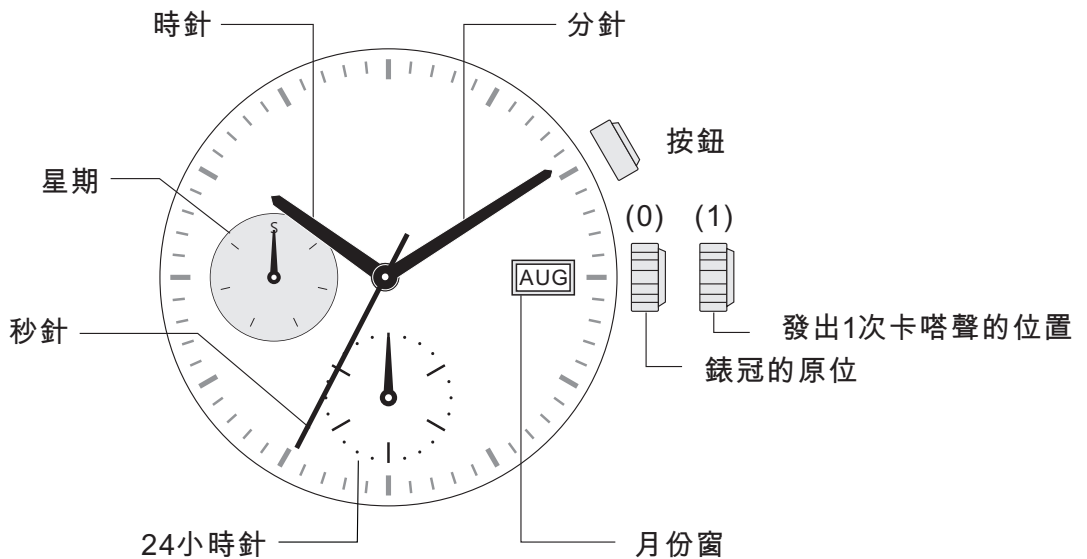

時間/日期設置(順時針)

### 操作程序

1. 調整星期、時間 ( 小時、24小時、分鐘和秒 )
2. 調整月份

### 調整星期和時間 ( 小時、24小時、分鐘和秒 )

小時、24小時、分鐘、秒和星期，都是相同的操作設置。



#### 星期


1. 秒針於12點位置時，將錶冠拉出至位置(1)。
  2. 以順時針方向轉動時針/分針至目標星期。  
每轉動24小時(2圈)，星期前進一天。
- 注意：請不要逆時針方向旋轉錶冠來設置星期。  
星期於上午0:00至上午5:30之間或延遲一些後做變換。

#### 時間

- 設置星期後，接著設置小時 ( 和24小時 ) 與分針。
1. 以順時針方向轉動時針/分針至目標時間。
  2. 為了更準確的設置，請先將分針轉動超前目標時間5分鐘，並再返回 ( 逆時針 ) 到所需時間。
  3. 將錶冠推回至位置(0)。
- 注意：由24小時錶盤檢查是否於設置時間之前已正確設置AM / PM。

### 調整月份

1. 每次按下月份調整按鈕時(2點鐘方向按鈕)，月份前進一個月。
2. 在進行月份更改時，請務必牢牢按下按鈕。

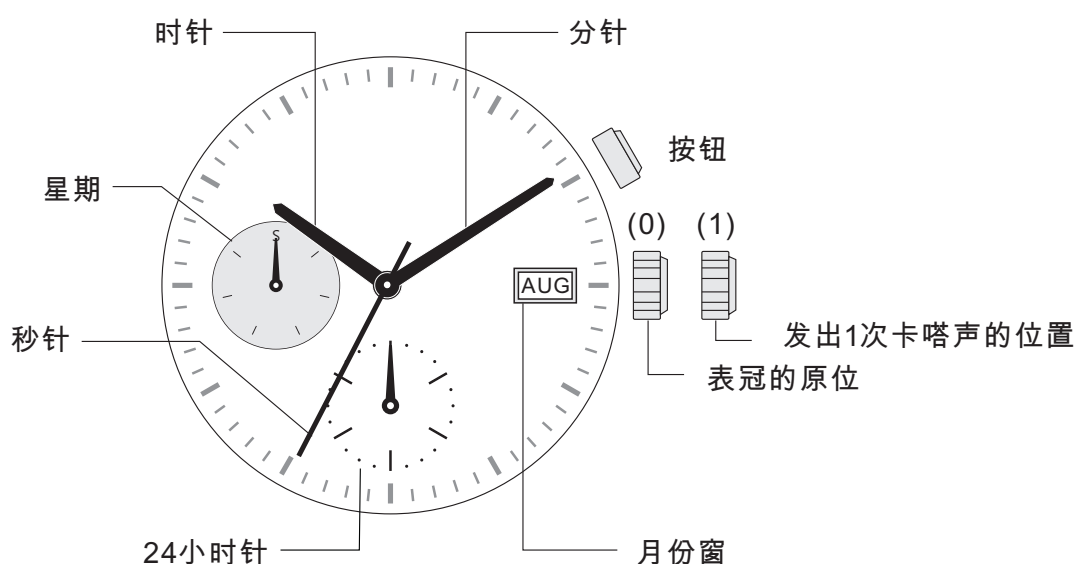

时间/日期设置(顺时针)

## 操作程序

1. 调整星期、时间 ( 小时、24小时、分钟和秒 )
2. 调整月份

### 调整星期和时间 ( 小时、24小时、分钟和秒 )

小时、24小时、分钟、秒和星期，都是相同的操作设置。



#### 星期

1. 秒针于12点位置时，将表冠拉出至位置(1)。
2. 以顺时针方向转动时针/分针至目标星期。

每转动24小时(2圈)，星期前进一天。

注意：请不要逆时针方向旋转表冠来设置星期。

星期于上午0:00至上午5:30之间或延迟一些后做变换。

#### 时间

设置星期后，接着设置小时 ( 和24小时 ) 与分针。

1. 以顺时针方向转动时针/分针至目标时间。
2. 为了更准确的设置，请先将分针转动超前目标时间5分钟，并再返回 ( 逆时针 ) 到所需时间。
3. 将表冠推回至位置(0)。

注意：由24小时表盘检查是否于设置时间之前已正确设置AM / PM。

#### 调整月份

1. 每次按下月份调整按钮时(2点钟方向按钮)，月份前进一个月。
2. 在进行月份更改时，请务必牢牢按下按钮。